



2001-2005 Honda Civic Tail Light Replacement

How to replace a non-functioning tail light

Written By: Tyler Smith






PARTS:

- [Replacement Tail Light](#) (1)
-


Step 1 — Tail Light



 To remove the risk of electrocution, turn off the vehicle before attempting replacement

Step 2



- Release the trunk latch.
-  The release can often be found on the floor, near the fuel access and hood release buttons.

Step 3



- Remove bulb from tail light assembly.

Step 4



- Remove the bulb from its' socket.
- ⚠ Be sure to only remove the bulb. Removing the socket as well will require another replacement in order to properly function.

To re-install a tail light, follow these steps in reverse.

This document was last generated on 2017-06-19 08:38:36 AM.